




SilverCap™
OverDrive™
 Turns Any Winch Into A
Ratcheting Winch

OVERDRIVE RATCHET CAP INSTRUCTIONS

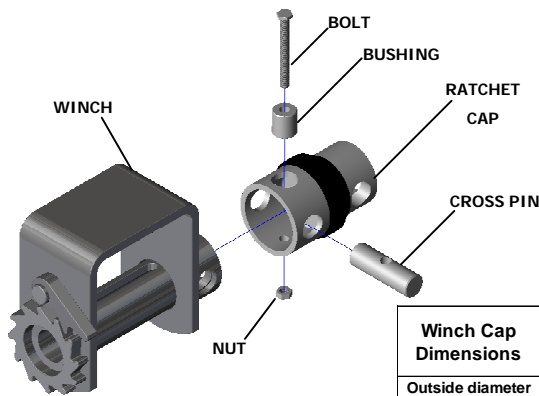

Winch Cap Dimensions	To Fit OverDrive 49723-10	To Fit OverDrive RR 49723-11
Outside diameter of winch cap	2.32" max	2.40" max
Distance from end of cap to edge of winch bar hole	.57" max	1.12" max
Space from winch frame to edge of winch bar hole	.28" min	.28" min
Winch bar hole diameters**	.89" min .97" max	.89" min .97" max

1. INSTALL RATCHET CAP ONTO WINCH DRIVE END.
2. INSERT CROSS PIN THROUGH HOLES IN RATCHET CAP AND DRIVE END OF WINCH.
3. LINE UP SMALL HOLE IN RATCHET CAP AND CROSS PIN SO THAT THE BOLT CAN BE INSERTED THROUGH BOTH PARTS.
4. INSERT BOLT AND BUSHING THROUGH HOLES IN RATCHET CAP AND DRIVE END OF WINCH.
5. INSTALL NUT TO END OF BOLT. TIGHTEN NUT TO APPROX. 50 IN-LB.
6. OPTIONAL: TACK WELD END OF BOLT AND NUT TO SECURE RATCHET CAP IN PLACE. IF REQUIRED USE TOUCH UP PAINT TO PROTECT TACK WELD AREA.
7. ANY EXCESSIVE BURRS IN OR AROUND BAR HOLES ON WINCH DRIVE CAP MUST BE REMOVED BY GRINDING OR FILING FOR PROPER FIT. WINCH BAR HOLES IN CAP MUST BE IN A SINGLE PLANE 90 DEGREES APART.