


# Load Binder Adjustment & Misuse

The ratcheting load binder hooks can adjust out from the body ~ 3 to 3 ½" max until they reach a safety stop. The safety stop is a pin in the threaded shaft that prevents the shaft from threading out of the body causing load loss. The photo below shows an extended hook and compares it to an unthreaded hook in the same orientation.

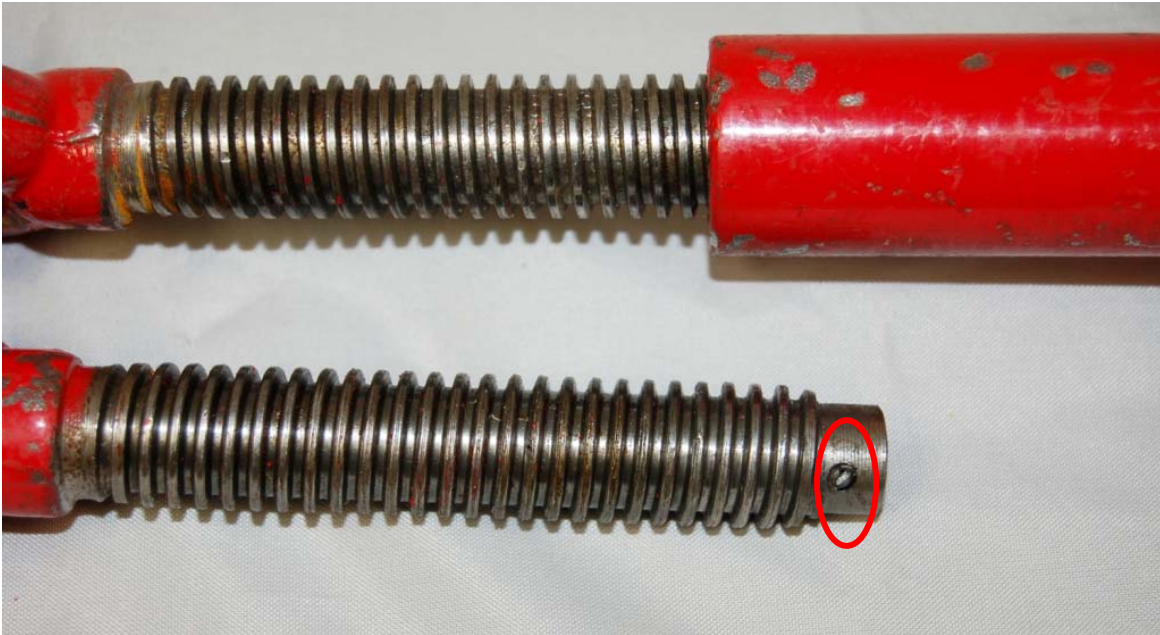

Trying to extend the hooks past the stops will 'jam' the pin against the stop, or shear off the pin (as shown above), resulting in damage to the internal threads (shown below) and making adjustments by hand difficult or impossible.

